





E-STRAIGHT JOINT INSTALLATION GUIDE

VERTICAL PLACEMENT

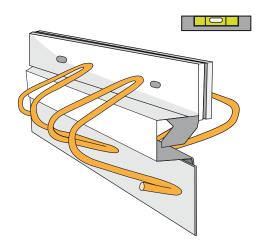




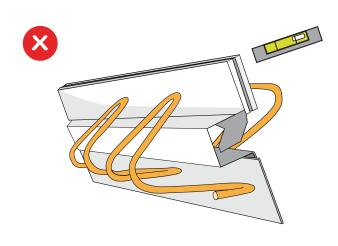


NO WELDING TO BODY

IMPORTANT!




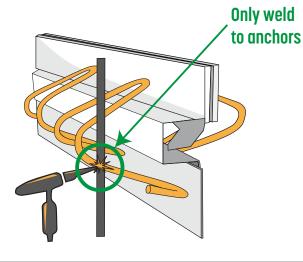


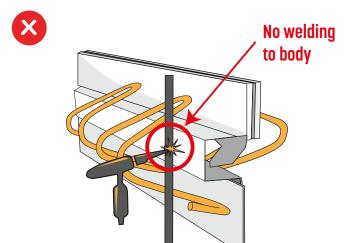

NO WELDING TO BODY / NO WELDING ON TOP




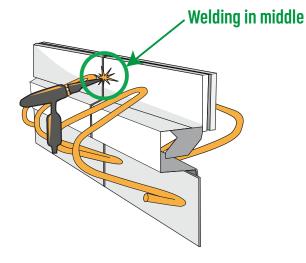

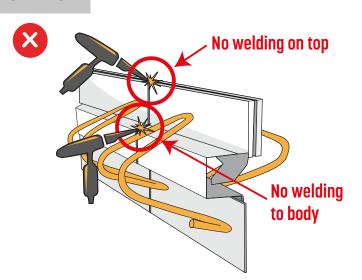



3 PINS LEFT + 3 PINS RIGHT (ALTERNATING)

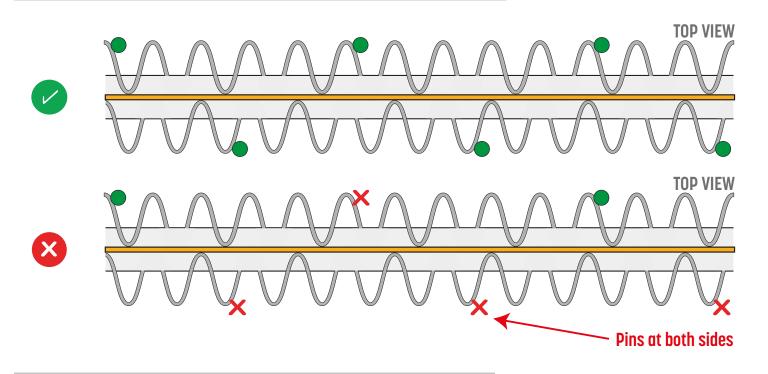

CONNECT IRON MESH ON TOP OF ANCHORS

